

Scissor Base for Sail Signs

Product Parts

1

1 - Scissor Base




Display Set-Up

Step 1

Remove the base from the box and move it along with your assembled sail sign to your desired location.

Step 3

Slip the pole of your sail sign over the pole on the Cross Base (1) to attach.

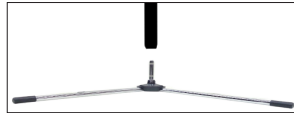

Step 2


Extend the legs of the Cross Base (1) outward, until they are flat on the ground.



Optional Ballast Set-Up

Step 1

For added stability, fill a Ballast with sand or water and use with the Scissor Base (1) before attaching the sail sign's pole.

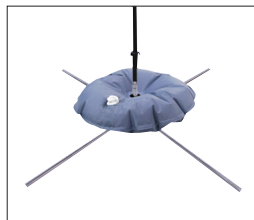

Rigid Ballast

Recommended for outdoor use and sail signs above 14' tall.



Round Water Ballast

Recommended for indoor use and sail signs under 14' tall.

Square Water Ballast

Recommended for outdoor use and sail signs above 14' tall.

Storage and Care

Place the base along with the sail sign into the Sail Sign's Carry Case and store in a cool, dry location. To clean, wipe with damp cloth.

