


Single Premium Boulevard Bracket System

302060


Product Specifications

Graphic sizes will vary - *Do not Exceed 24 square feet*
 Graphic Finishing: 3" Top and Bottom Pole Pockets with #2 Grommets

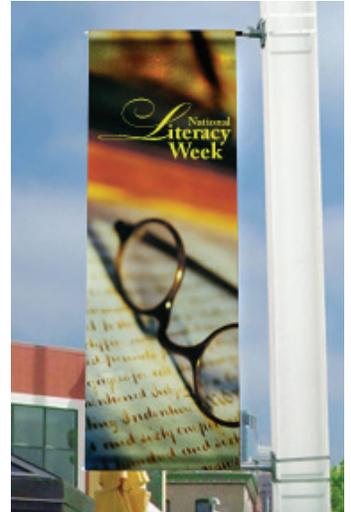

Product Parts

- 1 - Casting (x2)
- 2 - Fiberglass Pole w/Sleeves (x2)
- 3 - 40" Stainless Steel Bands (x4)
- 4 - Large Pin (x2)
- 5 - Small Pin (x2)
- 6 - Screws (x4)
- 7 - Large Washer (x2)
- 8 - Small Washer (x4)

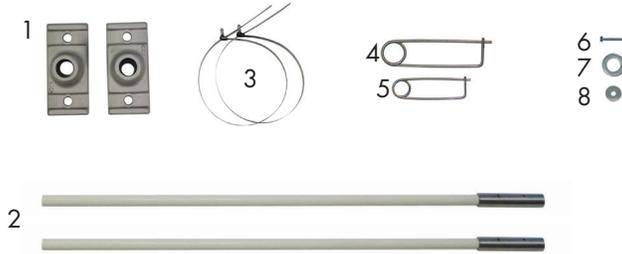

*Screw/nut driver will be needed for setup

Set-Up

Step 1

Attach the top Casting (1) to pole. Be sure the arrow is facing up - away from the banner.

Place a Screw (6) with a Small Washer (8) in the top & bottom holes and drill into place. Depending on the kind of pole - you may need to pre-drill the holes.



Step 2

Secure the Casting (1) to the Pole with two Stainless Steel bands (3). If attaching to a square or other shaped pole, it is recommended to use an additional set of bands. Available separately. Tighten the bands until they hold the bracket securely and lock it into place with a screw or nut driver. Be sure the band head is on the flat side of the pole or any edge or corner of pole and not on the casting. Clip off any excess band length.



DO NOT use a power tool to tighten the stainless steel bands! Over tightening will cause damage.
Installation section: Do not over tighten the bands. Do not exceed 30 IN pounds of torque.



Step 3

Insert the end of the Fiberglass Pole w/Sleeve (2) into the top Casting (1) Image A. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) Image B.

Before closing the Small Pin (5) attach the Large Pin (4) onto the Small Pin (5) as shown in Image C.



*Pin should clip below casting

Step 4

Slide the Large Washer (7) onto the Fiberglass Pole w/Sleeve (2). This will keep your banner from sliding up the arm.



Step 5

Measure your banner for correct placement of the lower Casting (1) so it fits your boulevard banner properly.


Repeat Step 1 & 2 to attach the Lower Castings (1).
Be sure the arrow is facing down - away from the banner.



Note: On the Bottom Casting the arrow is facing away from banner

Step 6

Insert the end of the other Fiberglass Pole w/Sleeve (2) into the lower Casting (1) Image A. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) Image B. Before closing the Small Pin (5) attach the Large Pin (4) onto the Small Pin (5) as shown in Image C.

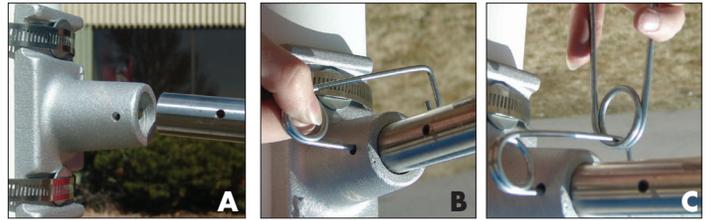

**Pin should clip above casting*

Step 7

Slide the Large Washer (7) onto the Fiberglass Pole w/Sleeve (2). This will keep your banner from sliding up the arm.



Step 8

Slide your banner onto the Fiberglass Pole w/Sleeves (2). Secure the top and bottom of the banner by pinning the Large Pin (4) through the banner's grommets.

